


## V2 Controller

### 1) Preparing for your first infrared sauna home experience

1. Review all health and safety instructions. If you're in doubt about using your infrared sauna, first consult with your physician.

### 2) LCD control panel

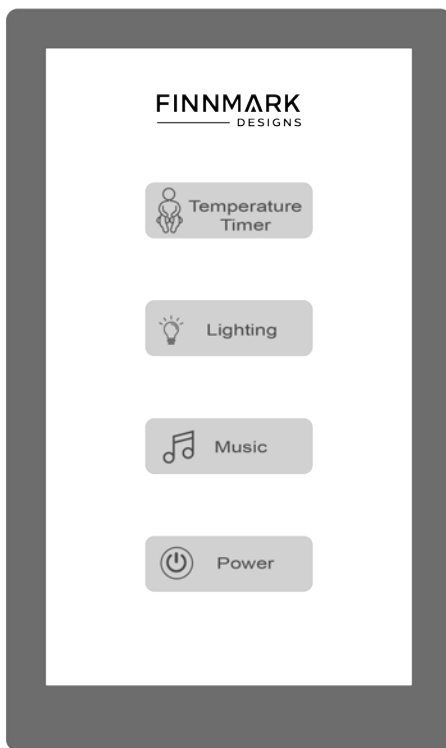

**Temperature | Timer**  
Set time and temperature

**Lighting**  
Adjust lighting

**Music | Bluetooth**  
Connect sauna to bluetooth

**Power Button**  
Turn sauna off

## Getting started

### 3) Powering on your sauna

1. Plug in the power cord to the electrical outlet. All lights on the LED Control Panel will flash once.
2. During Off mode, nothing will display.
3. We recommend turning the sauna on for the maximum time and temperature in order to burn off any factory dust before using your sauna for the first time. For maximum performance of the heaters, cycle your sauna (turn on to max temperature and run for one hour) 2-3 times.

### 4) Starting up your sauna


1. Hold your index finger on the bottom left side of the LCD screen until the controller turns itself on.



The controller is touch sensitive, so you must hold down the power button for 2-3 seconds.

# Settings

## 5) Setting the sauna session time and temperature

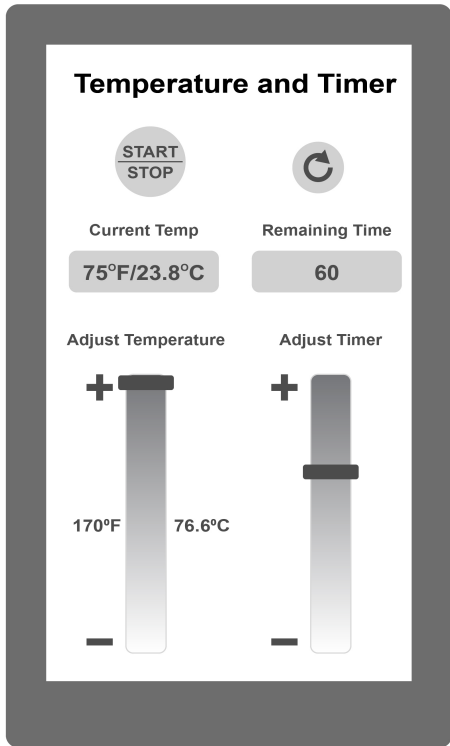

**Start | Stop**  
Start and stop heat and timer


**Return to Home**  
Go back to home screen

**Adjust Temperature**  
Use slider or + & - buttons

**Adjust Timer**  
Use slider or + & - buttons

# Bluetooth

## 6) Using Bluetooth

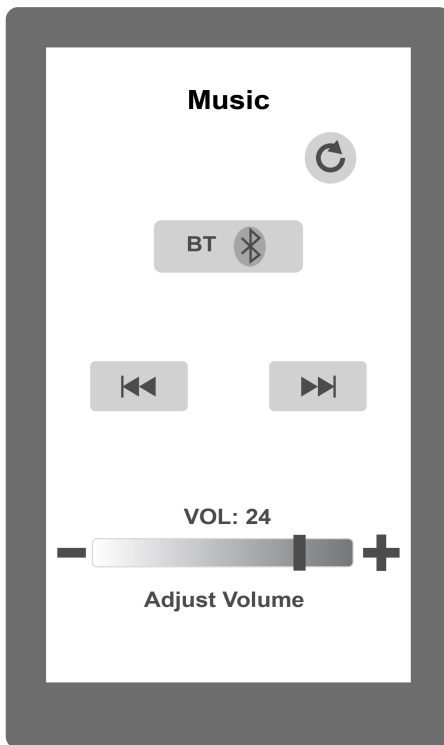

**Return to home**  
Return to home screen

**Pair your bluetooth device**  
Press to pair your device

**Select track**  
Previous and next track


**Adjust volume**  
Increase or decrease volume

Your bluetooth device should see BT-SAUNA after you select the BT button on the controller.

Please note that most device operating systems are constantly being updated while the controller's operating system stays the same. This very well may be the cause of bluetooth signal disruptions (sound cutting in and out).

# Lighting

## 7) Controlling the multi-color LED light

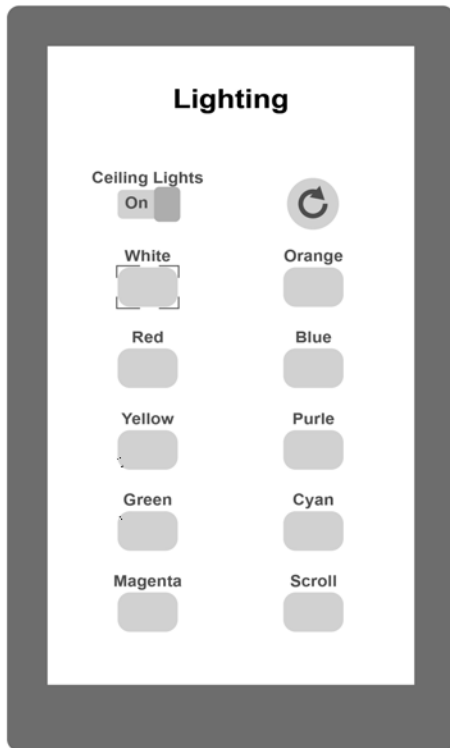

**Power ceiling lights**  
Select slider to turn lights on / off

**Return to home**  
Return to home screen

**Select color**  
Select desired color

**Scroll**  
Use finger to scroll different colors

Red light therapy can be used during your sauna session by selecting the "red" button.

# Error Codes

## 11) Error codes

**EO** EO: Temperature Sensor Disconnected. Reset sauna. Unplug and plug back in. Call customer support if needed.

**E1** E1: Short circuit. Check all connections.

**HH** HH: Inside Sauna Temperature is over the limit (170°F/76°C).

**HH error will be resolved automatically. During HH error, your sauna will automatically shut down and go into a cool-down period.**

## 12) Customer service

### Contact Information for Customer Service:

• Telephone No. : \_\_\_\_\_ **(800) 983-0067**  
• Email : \_\_\_\_\_ **support@finnmarkdesigns.com**



# G. Limited Warranty

For your record, please complete the following information.  
You will need to refer to this information when calling customer service:

Date of Purchase: \_\_\_\_\_

Date of Delivery: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Dealer Information (Name & Telephone): \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Phone #: (800) 983-0067

Email:

support@FinnmarkDesigns.com

FinnmarkDesigns.com



---

(800) 983-0067 | [FinnmarkDesigns.com](https://FinnmarkDesigns.com)